 



HEAVY DUTY STAPLE GUN TACKER

OPERATING INSTRUCTIONS

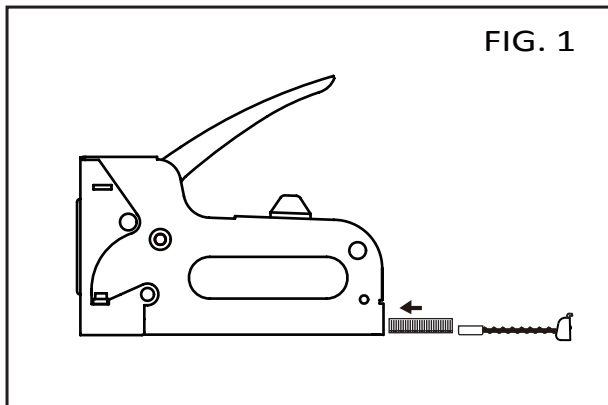

LOADING THE STAPLES (see fig. 1)

 1. Pull the pusher rod out by pressing down the tab marked "PRESS DOWN".
2. Insert a strip of staples. NOTE: Insert the same width of staples each time. Never combine different width of staples, as this may cause delivery problems when operating.
3. Replace the pusher rod.

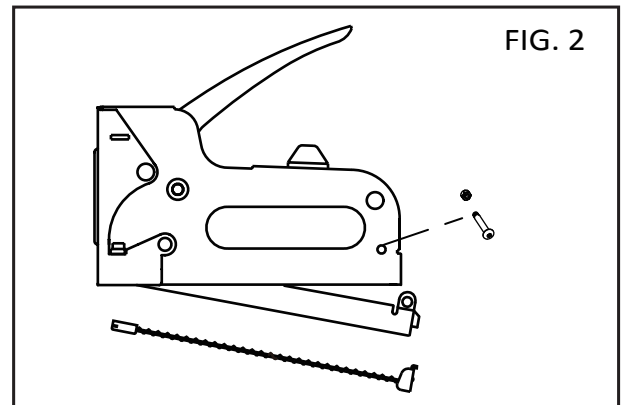


CLEANING THE STAPLE CHANNEL (see fig. 2)

1. Remove the pusher rod.
2. Remove the screw and nut from frame-channel.
3. Pull down the entire inside frame and clean it with a clean and dry rag. GREASE SHOULD NOT BE USED.
4. Replace frame, screw and nut. Insert pusher rod.

POSITION OF STAPLES/STAPLER PENETRATION (see fig. 3)

A good fastening cannot be obtained unless the front part of the stapler is in contact with the material. It is necessary to bear down on the stapler so the stapler is totally flat on the material when stapling.

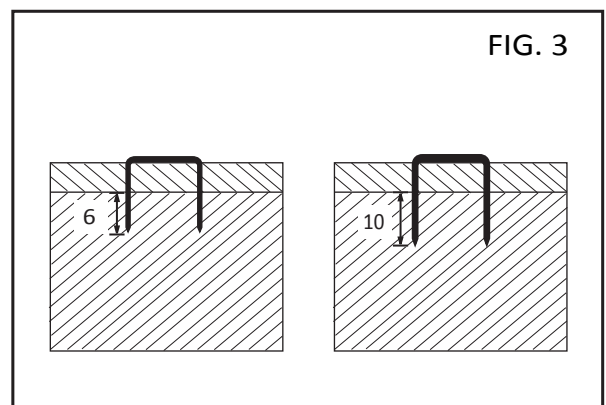

IMPORTANT:

- 1) If staple is not driven flush that means staples too long. Try shorter leg for better results.
- 2) Insert the same size of staples each time. Never combine different length in staple magazine, that may cause feeder troubles when operating.
- 3) **Never point stapler at anyone. Always wear goggles to minimize the risk of eye injury.**